

**MARKER No. 20: FLORANCE I. SNYDER (d. 1859) daughter of M. & S. Snyder**


---

**EXISTING CONDITIONS**

- The marble marker is in fair/poor condition. The marker does not appear to be attached to a base and is partially buried and leaning over to the west (on a pile of dirt from earth-boring insects). The inscriptions are on the west side of the marker and difficult to see.
- There is a transverse crack just below the inscription area.
- A non-original concrete berm is located to the east of the base.
- No visible evidence of an original sandstone base.



*Before (July 2009)*

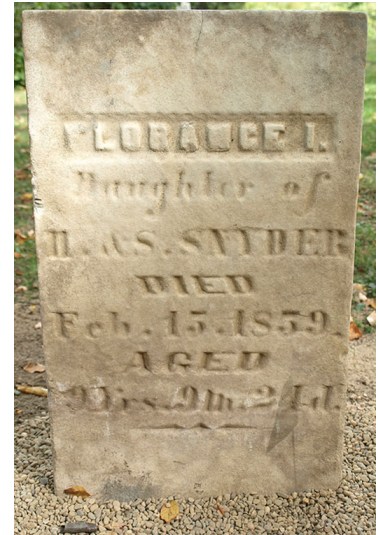

*After (September 2009)*

**TREATMENT SUMMARY**

**A. Excavation/Fragment Recovery**

1. Carefully excavate partially-buried headstone.
2. Remove non-original concrete berm.
3. Search for sandstone base.

**B. Cleaning**

1. For removal of biological growth and general soiling, clean the marble headstone with D/2 Architectural Antimicrobial.
  - a. Clean water at low pressure (max 400 psi) and hand-pump sprayer.
  - b. Natural and nylon bristle brushes (varying stiffness and size).
  - c. Avoid dissolution or erosion of the stone.

**C. Re-attachment and Repair**

**D. Reset and Level**

1. Reset headstone at the proper level in the ground in a mix of fine gravel, sand, cement, and hydrated lime.
  - a. Place brick or pieces of stone in hole for additional support.

**E. Site Preparation and Repair**

1. Place pea gravel around base